


MIRBA IP44

INSTALLATION INSTRUCTIONS | APRIL 2020

Mounting base:

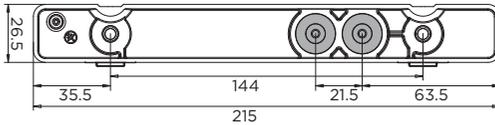



The light source of the integrated LED is not replaceable; When the light source reaches its end of life the whole luminaire should be replaced.

Caution, risk of electric shock


necessary for IP-rating

	A	B	C
CABLE			
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ²	2or3x 0.75mm ² 2x 1.0mm ²	0.75mm ² 1.5mm ²


If the installation conditions allow, in order to have a better appearance, we suggest that the side including two socket screws is facing upwards.

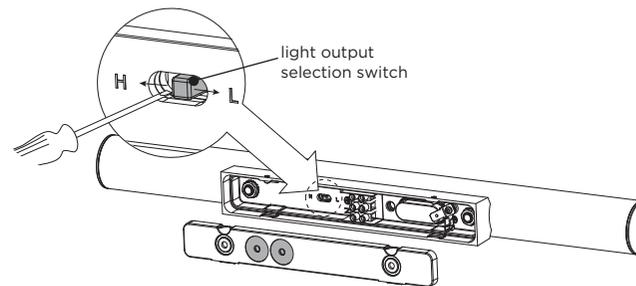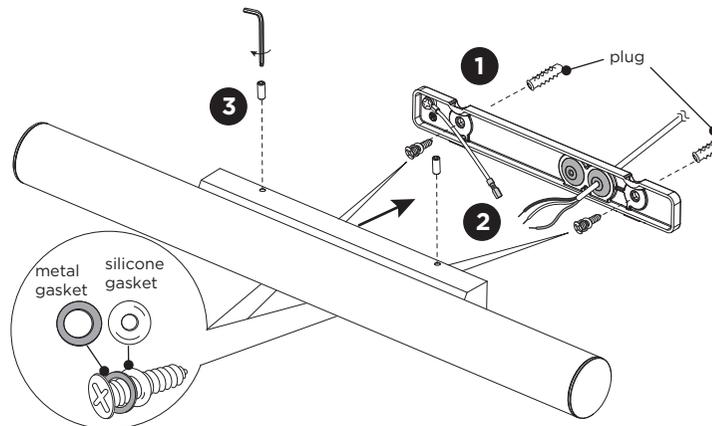

Product must be powered off before switching.

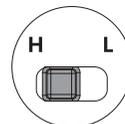


High light output

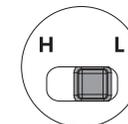

Low light output


DIMENSIONS

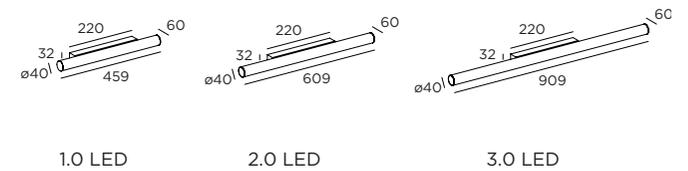


MOUNTING INSTRUCTION

- Remove the mounting base from the MIRBA and mount it on the wall with the screws and the plugs. **Important note: the screws need to hold both the metal gaskets as the silicone gaskets when fixing them into the plugs** (screws, gaskets and plugs are included).

- POWER CONNECTION**
connect to 220-240V

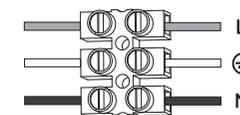

for the base earth cable:

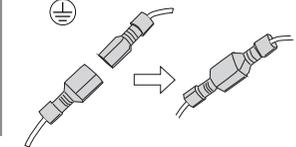

- Fixate the luminaire on the base with 2 socket screws.