

1598 Firehood for downlights




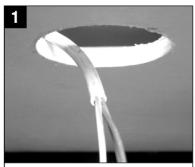


Lead the cable from the transformer through the previously-cut downlighter fitting aperture

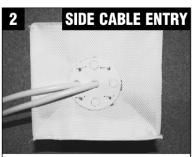


Pierce the side cable entry point with a sharp object to suit the cable size and feed sufficient cable through this hole for the connection

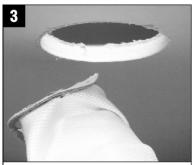


Compress the cover to fit into the opening and push it into ceiling void. Maintain contact

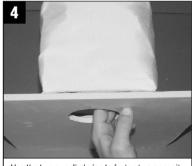

Use the two supplied pins to fasten two opposite inner flanges of the cover to the plasterboard

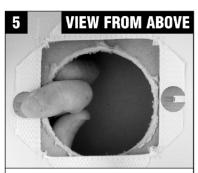

Use a hammer/screwdriver handle to open out the cover material away from the light fitting

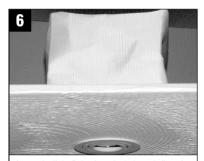

Insert the light fitting into the hole and allow the clips to fasten over the inner flaps of the cover The fitting is now protected by a secure cover,

IMPORTANT

PLEASE ENSURE THAT ANY FITTED CEILING INSULATION MATERIAL DOES NOT COMPRESS THE LIGHTING COVER

Astro Lighting Ltd. G2 River Way, Harlow CM20 2DP, Great Britain

T: +44 (0) 1279 427001 F: +44 (0) 1279 427002 sales@astrolighting.co.uk www.astrolighting.co.uk

Issue : 1 Issued : 24.03.11